 


omega

CERAMIC HEATER

MODEL : 2007A

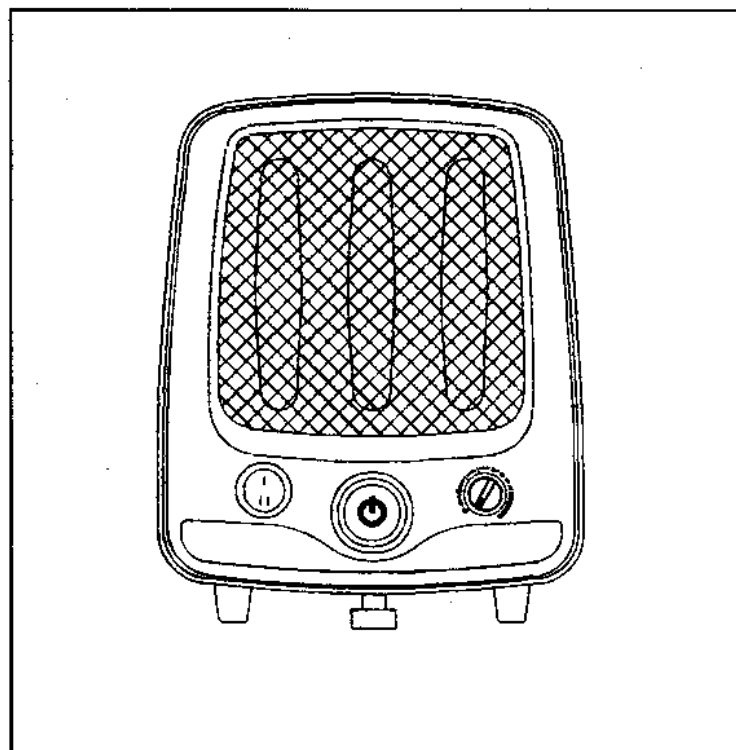

SPECIFICATION

Voltage rating: 230-240VAC, 50Hz

Power consumption: 1000W / 2000W

Unit Size: 18.5cm (L) x 15.0cm (W) x 22.0cm (H)

Unit Weight: 2.0 kgs

OPERATING INSTRUCTIONS

(1) POWER ON/OFF SWITCH

(I) Press down the switch (button down), the power indicator lights up and this heater will operate.

(II) Press the switch on (button up), the power indicator is off and this heater does not operate.

(2) POWER HI-LOW SWITCH

(I) Press the switch at [I] position, low heat (1000W) function operates.


(II) Press the switch at [II] position, high heat (2000W) function operates.

(3) TEMPERATURE CONTROL KNOB

This rotary knob is to regulate the heat in order to maintain a desired temperature. When the room temperature is lower than the temperature setting on the knob, the heater will function and heat up the room until the desired temperature is attained.

(4) TIP-OVER SWITCH

The function is to turn the heater off if it is accidentally knocked over.

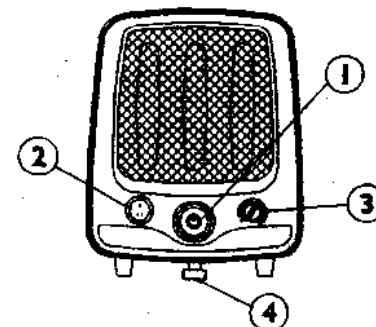

OPERATION

1. Please read all the instruction before using this heater.
2. Take off the packing materials.
3. Press the power switch to [OFF] position.(i.e. Power indicator is off), then turn temperature control knob to minimum position.
4. Plug the power cord into an electrical outlet.
5. Press the power HI-LOW switch, which options you select.
6. Press the power switch at [ON] position, the power indicator lights up and then the heater starts up.
7. Turn the temperature control knob in clockwise direction until the heater turns on. Slowly thrn the knob counter clockwise until the heater shuts off. The heater will automatically maintain this temperature. For a lower temperature, rotate the knob further counter clockwise. For a higher temperature, rotate the knob clockwise.

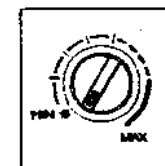


Fig.1

IMPORTANT SAFETY FEATURE

This heater is equipped with an automatic overheat safety device. This safety device automatically turns off the heater if an overheat condition were to occur. The unit can resume power after caused objects or conditions, such as covering by a towel or the heater unit too close to a wall, are removed.

MAINTENANCE AND CLEANING

- A. Before cleaning, turn off the heater, unplug the power cord and allow the heater to cool.
- B. Do not immerse power cord and plug or heater in water or other liquid or pour water or other liquid over the heater.
- C. To use a vacuum cleaner to remove dust and lint from air openings.
- D. To clean exterior painted surfaces by using a solution of water and mild detergent with wrung-out damp sponge. Rinse and wring out the damp sponge and wipe the exterior surface again. Finally, wipe with a dry cloth. Allow sufficient time to dry before plugging electrical cord into outlet.

DO NOT USE THE HEATER IF IT HAS MALFUNCTIONED OR BECOME DAMAGED IN ANY WAY. CONTACT AN AUTHORIZED SERVICE REPRESENTATIVE FOR INFORMATION AND ASSISTANCE.

IMPORTANT SAFEGUARDS

1. Read all instructions before using this heater.
 2. This heater is hot when in use. To avoid burns, do not let bare skin touch hot surfaces. If provided, use handles when moving this heater. Keep combustible materials, such as drapery, and other furnishings at least 3 feet (0.9 m) from the front of the heater and away from the side and rear.
 3. Extreme caution is necessary when any heater is used by or near children or invalids and whenever the heater is left operating and unattended.
 4. Always unplug heater when not in use.
 5. Do not use outdoors.
 6. This heater is not intended for use in bathrooms, laundry areas and similar indoor locations. Never locate heater where it may fall into a bathtub or other water container.
 7. Do not run cord under carpeting. Do not cover cord with throw rugs, tunners, or the like. Arrange cord away from traffic area and where it will not be tripped over.
 8. To disconnect heater, remove plug from outlet.
 9. Connect to proper electrical outlets only.
 10. Do not insert or allow foreign objects to enter any ventilation or exhaust opening as this may cause an electric shock or fire, or damage the heater.
 11. To prevent a possible fire, do not block air intakes or exhaust in any manner. Do not operate this appliance on a soft surface because the inlet openings can be blocked.
 12. A heater has hot and arcing or sparking parts inside. Do not use in areas where gasoline, paint, or flammable liquids are used or stored.
 13. Use this heater only as described in this manual. Any other use not recommended by the manufacturer may cause fire, electric shock, or injury to persons.
 14. SAVE THESE INSTRUCTIONS.
- CAUTION:** -STORE THE HEATER IN COOL DRY LOCATION WHEN NOT IN USE.
-DO NOT STORE UNTIL THE HEATER COOLS DOWN.
- WARNING:** -ANY OTHER SERVICING SHOULD BE PERFORMED BY AN AUTHORIZED SERVICE REPRESENTATIVE.
-THE HEATER MUST NOT BE LOCATED IMMEDIATELY BELOW A SOCKET-OUTLET.
-DO NOT USE THIS HEATER IN THE IMMEDIATE SURROUNDINGS OF A BATH, A SHOWER, OR A SWIMMING POOL.
-THE APPLIANCE IS NOT INTENDED FOR USE BY YOUNG CHILDREN OR INFIRM PERSONS WITHOUT SUPERVISION.
-YOUNG CHILDREN SHOULD BE SUPERVISED TO ENSURE THAT THEY DO NOT PLAY WITH THE APPLIANCE.
-IF THE SUPPLY CORD IS DAMAGED, IT MUST BE REPLACED BY THE MANUFACTURER OR ITS SERVICE AGENT OR A SIMILARLY QUALIFIED PERSON IN ORDER TO AVOID A HAZARD.