

omega
altise

OC24E
2400W Enclosed
Oil Filled Column Heater



Instruction
Manual

Important Safety Instructions

1. Disconnect the power plug before dismantling, assembling or before cleaning.
2. Make sure the heater is on a dry and even surface.
3. Always use the heater in an upright position.
4. Do not insert or allow foreign objects to enter any ventilation or exhaust opening, as this may cause an electric shock, fire or damage to the appliance.
5. This appliance is not intended for use by persons (including children) with reduced physical, sensory or mental capabilities, or lack of experience and knowledge, unless they have been given supervision or instruction concerning use of the appliance by a person responsible for their safety.
6. Children should be supervised to ensure that they do not play with the appliance.
7. The heater must not be located immediately below a socket-outlet;
8. Do not use this heater in the immediate surroundings of a bath, a shower, or a swimming pool;
9. If the supply cord is damaged, it must be replaced by the manufacturer, its service agent, or similarly qualified persons in order to avoid a hazard;
10. Do not use your appliance with an extension cord unless it has been checked and tested by a qualified electrician or electrical supplier.
11. Do not use the appliance for any other purpose than its intended use.
12. Do not position the appliances in close proximity to curtains or other combustible materials. Keep combustible material such as furniture, cushions, bedding, paper, clothes, curtains etc. at least 1.0m away from the heater.
13. Do not operate in areas where gasoline, paint or other flammable liquids are used or stored.

CAUTION: In order to avoid a hazard due to inadvertent resetting of the thermal cutout, this appliance must not be supplied through an external switching device such as a timer, or connected to a circuit that is regularly switched on and off by a utility.

WARNING: IN ORDER TO AVOID OVERHEATING, DO NOT COVER THIS HEATER


Read all instructions before using this unit. Keep them for future reference.

Specifications

Model	OC24E
Rated Voltage	240V / 50Hz
Watts	2400W
Controls	Manual
Measurements (l x h x d mm)	685 x 165 x 655
Nett Weight (kg)	17.3

Settings	2 heat settings
Humidifier	Built-in
Thermostat	Adjustable
Cord storage	Cable bracket
Warranty	2 year replacement

Parts List

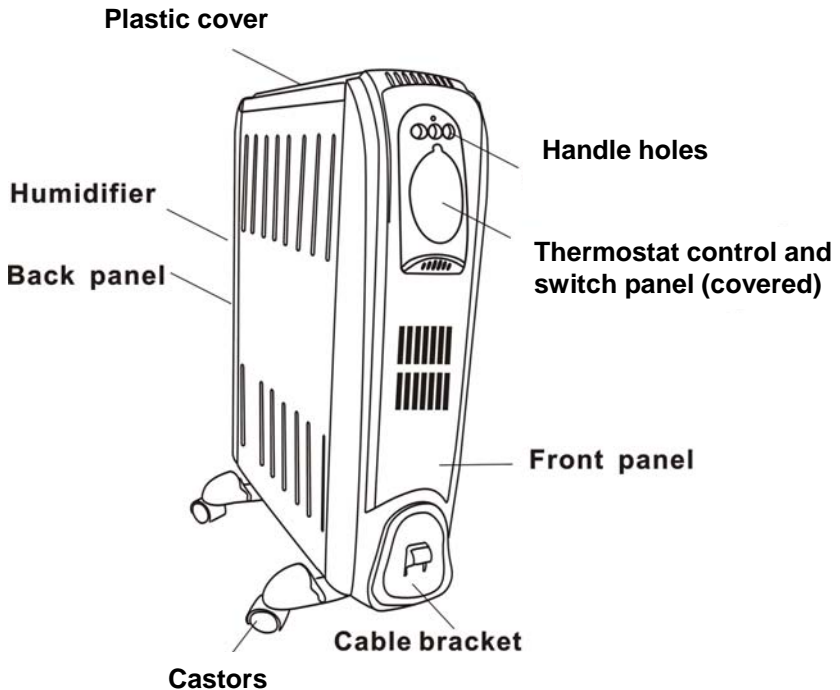

Assembly Instructions

Fitting the Castors

The heater is packaged with the castors unattached. You must attach them before operating the heater. Fit the castors to the mounting plates using the bolts provided.

- 1 Place the radiator body upside-down on a soft surface to avoid damage to the heater. Make sure it is in a stable position and will not fall.
- 2 To attach the castor mounting plate to the heater body:
 - a. On each end of the inverted body of the heater you will find a mounting plate for the castors with plastic inserts which are used to secure the screws (see Fig 1).
 - b. Align the holes on one set of castors with the plastic inserts and secure with the screws provided (See Fig 2).
 - c. Repeat at the other end.
- 3 Return the unit to an upright position. It is now ready for use.



Fig 1.



Fig 2.

IMPORTANT: Do not operate without castors attached. The heater must only be operated in an upright position. Any other position could create a hazardous situation. Ensure that the castors are fitted to the base of the heater so that, when in use, the controls are at the top and the cable storage is at the bottom of the control panel.

Operating Instructions

Connect the heater into the power supply. The two power selector switches on the control panel provide a choice of half or full heat output to suit varying conditions and for economy of operation.

1. The switch marked “ I ” provides approximately half the heat output of the heater.
2. Select both switches (marked “ I ” and “ II “) to provide full heat output.

Thermostat Control

Turn the thermostat knob fully clockwise to its highest position for maximum heat output to warm the room rapidly. When the room temperature has reached the desired level, turn the thermostat knob back slowly until the thermostat clicks off and the neon light goes out. The heater will then operate under the control of the thermostat to maintain the chosen temperature level, provided that the heater is of sufficient size for the room to be heated.

Humidifying Cup

1. The use of the humidifying cup is located on the back panel of the unit
2. Use of the humidifying cup is optional
3. To use the humidifying cup you will need to open the flap on the back panel of the unit, fill it with clean water and replace the flap.
4. The water will evaporate slowly during the heating process to place moisture into the warm air.


Using the Timer

The timer is a 24-hour programmable timer enabling the heater to be switched ON and OFF automatically if desired. The heater must be connected to the electricity supply for the timer to operate. The switch on the timer will also control the electricity supply to the elements when in use.

The timer has a small switch on the inside of the dial. The functions are as follows:

O = OFF (the unit will not work)

I = ON (manual operation)

 = Timer function is ON




Manual Operation


Set the switch on the inside of the timer to the “I” position. The heater will now operate continuously under the control of the thermostat.

Automatic (Timer) Operation

To start you will need to set the current time. This is done by rotating the dial clockwise until the correct time of the day is indicated opposite the datum (▼) mark. Should the electricity supply to the heater be disconnected it will be necessary to reset the timer to the time of day.

Set the switch on the inside of the timer to the  position. Push the red pins outwards corresponding to the time you want the radiator to turn on. Push the pins in towards the centre corresponding to the time you want the radiator to turn off.

Each pin represents 15 minutes, so if heating is required for a 2 hour period 8 pins should be moved. The timers may be set to give as many 'ON' periods of any length as may be required over the 24 hour period. The program will repeat itself every 24 hours until changed or the unit is switched off at the power supply. This program may be over ridden at any time by switching to Manual (I) or Off (O).

NOTE: The heater will not operate if the timer is set to the  position and the pins are not activated according to the times required.

Care and Maintenance

1. Always disconnect the cord from the electrical outlet when cleaning your heater.
2. Light accumulated dust may be removed from the heater with a soft cloth or vacuum cleaner using the dusting brush attachment.
3. Wipe the exterior surfaces of the heater occasionally with a cloth moistened (not dripping wet) with a mild soap solution. Dry the case thoroughly with a soft dry cloth before operating the heater.
4. Avoid the use of gasoline, benzine, thinner etc as they may result in damage to the heater.
5. Store the heater in a clean dry place when not in use.



CAUTION! Do not immerse the heater in water or allow water to drip into the interior of the fan housing as this could create a fire or electric shock hazard.



WARNING! Do not attempt to open or repair the heater yourself. Doing so could void the warranty and cause damage or personal injury.

Omega Altise products are distributed in Australia by MEA,
(A Division of Hagemeyer Brands Australia Pty Ltd)

ABN 28 001 375 686

Locked Bag 4013, Kingsgrove NSW 2208

Phone: 1300 739 033

Fax: 1800 838 899

Email: customerservice@meappliances.com.au

Web: meappliances.com.au