


Timer (Model OCH20FTA)

24 hour clock

With the switch on the timer in position  the operation of the heater is controlled by the timer in accordance with its programming. This function can only be used if a heat level has been preselected (see Operation and Fan instructions). In position 0 the operation is not controlled by the timer, but by the power switch position and thermostat setting. In position 1 the heater is not ready for operation. The clock is run electronically and will only function if there is a power supply. In the event of power failure the timer must be reset.

Setting the time

Turn the outer dial of the timer in a clockwise direction until the time of day (24-hour clock) corresponds with the triangular marking. One complete turn of the dial corresponds to 24 hours.

Programming the timer

The outside edge of the timer is separated into 96 "riders". One "rider" represents a 15 minute interval, and corresponds to each 15 minute mark on the dial. Begin with all of the "riders" pulled out away from the heater, and push the required amount in back towards the heater. When the "riders" which have been pushed in are over the triangle marking on the casing, the appliance is switched on, and will turn itself off when the "riders" over the triangle marking are pulled out.

Frost Watch

The frost watch setting is used to prevent the room temperature from falling below approximately 5°C.

- Choose the power level desired on the heat control switch.
- Turn the thermostat knob to the minimum setting. The heater will now switch on automatically if the room temperature falls below approximately 5°C.

Cleaning Instructions

The heater requires regular cleaning to ensure trouble free operation:

- Unplug the heater from the mains supply before cleaning.
- Use a damp cloth to wipe the exterior of the heater to remove dust and dirt.
- Use a vacuum cleaner to remove dust and fluff from the inlet and outlet grilles.
- Ensure the heater is dry before plugging back into the mains supply.

OMEGA APPLIANCES

2-8 Baker Street, BOTANY.
NSW 2109

Tel: 61 2 93845678

Fax: 61 2 96669318

www.omegasmeg.com.au

a division of Hagemeyer Brands
Australia Pty Ltd

omega

CONVECTOR HEATERS

Models OCH20A/OCH20FA/OCH20FTA

OPERATING INSTRUCTIONS



MODELS AVAILABLE

OCH20A - 2000W, 3 Heat settings with Thermostat

OCH20FA - 2000W, 3 Heat settings with Thermostat and Turbo Fan

OCH20FTA - 2000W, 3 Heat settings with Thermostat, Turbo Fan and 24 Hour Timer

Thank you for choosing a OMEGA Fan Heater. It is a remarkably versatile product which offers a choice of 720, 1250 or 2000 watt heating. This OMEGA convector heater has been designed and manufactured to high standards of engineering and with proper use and care, as described in this leaflet, this appliance will give you years of useful service. Please read these instructions carefully.

GENERAL CARE AND SAFETY GUIDE

- Read all instructions before using this appliance and keep them for future reference.
- Use only the voltage specified on the rating plate of the heater.
- Do not cover or restrict airflow to the inlet or exhaust grilles in any manner as the appliance may overheat and become a fire risk.
- Keep all objects at least 1 meter from the front, sides and rear of the appliance.
- Do not place appliance close to a radiant heat source.
- Do not operate in areas where gasoline, paint or other flammable liquids are used or stored.
- Do not use the appliance to dry clothes.
- Do not insert or allow foreign objects to enter any ventilation or exhaust opening, as this may cause an electric shock, fire or damage to the appliance.
- Do not operate any appliance with a damaged cord, plug or after the appliance malfunctions or has been dropped or damaged in any manner. Return to a qualified electrical person for examination, electrical or mechanical adjustment, service or repair.
- This appliance is intended for household use only and not for commercial or industrial use.
- Use this appliance only as described in this manual. Any other use is not recommended by the manufacturer and may cause fire, electric shock or injury.
- The most common cause of overheating is deposits of dust or fluff deposits in the appliance. Ensure these deposits are removed regularly by unplugging the appliance and vacuum cleaning air vents and grilles.
- Do not use abrasive cleaning products on this appliance. Clean with a damp (not wet) cloth rinsed in hot soapy water only. Always remove plug from the mains supply before cleaning.
- Do not connect the appliance to the mains voltage until completely assembled and adjusted.
- This appliance heats up slightly when in use. To avoid burns, do not let bare skin touch hot surfaces.
- Switch off and use handles where provided when moving.
- Always operate on a flat horizontal surface.
- Do not operate with cord set coiled up as a build up of heat is likely, which could be sufficient to become a hazard.
- The use of an extension cord with this appliance is not recommended.
- Do not remove plug from power socket until the appliance has been switched off.
- Do not remove plug from power socket by pulling flex - always grip plug.
- Always unplug appliance when not in use.
- Do not allow cord to come in contact with heated surfaces during operation.
- Do not run cord under carpeting, throw rugs or runners etc. Arrange cord away from traffic areas so that it will not be tripped over.
- Do not twist, kink or wrap the cord around the appliance, as this may cause the insulation to weaken and split. Always ensure that all cord has been removed from any cord storage area.
- Do not store appliance while it is still hot.
- This appliance is not intended for use by young children or infirm persons without supervision.

- Young children should be supervised to ensure they do not play with the appliance.
 - The appliance must not be located immediately below a socket-outlet.
 - Do not use this appliance in the immediate surrounds of a bath, a shower or a swimming pool or other liquids.
 - If the supply cord is damaged, it must be replaced by a qualified electrical person in order to avoid a hazard.
- Do not use this appliance outdoors, or on wet surfaces. Avoid spilling liquid on the appliance.

ASSEMBLY AND OPERATING INSTRUCTIONS

Always choose a safe location for the heater, keeping in mind the safety precautions outlined.

- Remove all product pieces from the packaging; - REMEMBERING to keep all plastic bags away from children or animals.
- ONLY use this heater while it is upright.
- Insert the plug into the power outlet.
- Choose the power level desired:
 - Low (I)
 - Medium (II)
 - High (I & II)
- Turn the thermostat knob until the maximum temperature is obtained on the graduated scale. When the desired temperature is reached, slowly turn the knob anti-clockwise until the heater turns off (you will hear a click). The temperature will now remain constant, regulated by the thermostat.

Power levels

The power level switches are marked I and II. For 750W of power turn only switch 1 on. For 1250W of power turn only switch 2 on. For maximum power (2000W) ensure both switches 1 and 2 are on.

Turbo Fan (Models OCH20FA & OCH20FTA only)

 Fan only

- The OCH20FA and OCH20FTA models have a turbo fan boost switch, which allows the warm air to be circulated around the room more efficiently.
- By leaving the heat switches in the off position, you can use this fan only selection to circulate cool air during the summer months.