

omega
altise

OCM2200
Micathermic Column Heater



Instruction
Manual

Important Safety Instructions

1. Disconnect the power plug before dismantling, assembling or before cleaning.
2. Make sure the heater is on a dry and even surface.
3. Always use the heater in an upright position.
4. Do not insert or allow foreign objects to enter any ventilation or exhaust opening, as this may cause an electric shock, fire or damage to the appliance.
5. This appliance is not intended for use by persons (including children) with reduced physical, sensory or mental capabilities, or lack of experience and knowledge, unless they have been given supervision or instruction concerning use of the appliance by a person responsible for their safety.
6. Children should be supervised to ensure that they do not play with the appliance.
7. The heater must not be located immediately below a socket-outlet;
8. Do not use this heater in the immediate surroundings of a bath, a shower, or a swimming pool;
9. If the supply cord is damaged, it must be replaced by the manufacturer, its service agent, or similarly qualified persons in order to avoid a hazard;
10. Do not use your appliance with an extension cord unless it has been checked and tested by a qualified electrician or electrical supplier.
11. Do not use the appliance for any other purpose than its intended use.
12. Do not position the appliances in close proximity to curtains or other combustible materials. Keep combustible material such as furniture, cushions, bedding, paper, clothes, curtains etc. at least 1.0m away from the heater.
13. Do not operate in areas where gasoline, paint or other flammable liquids are used or stored.

CAUTION: In order to avoid a hazard due to inadvertent resetting of the thermal cutout, this appliance must not be supplied through an external switching device such as a timer, or connected to a circuit that is regularly switched on and off by a utility.



WARNING: IN ORDER TO AVOID OVERHEATING, DO NOT COVER THIS HEATER

Read all instructions before using this unit. Keep them for future reference.

 
Specifications

Model	OCM2200
Rated Voltage	240V / 50Hz
Watts	2200W
Heating Element	Micathermic
Dimensions (h x w x d) mm	828 x 645 x 275
Nett Weight	11kg

Controls	Manual
Settings	3 heat settings
Thermostat	✓
Safety Features	Overheat protection
Warranty	2 year replacement

Parts List

- A. Back cover
- B. Handle for manoeuvring
- C. Control panel
- D. Side cover
- E. Power cord
- F. Power cord bracket
- G. Rear wheels and wheel-cover
- H. Front castors
- I. In-built humidifier cup
- J. Top cover

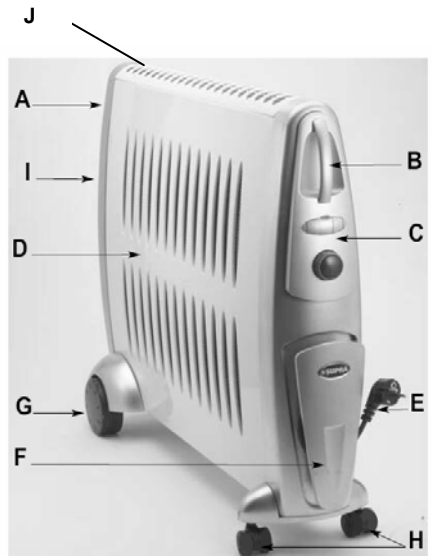





Assembly Instructions

Fitting the Castors

The heater is packaged with the castors unattached. You must attach them before operating the heater.


- 1 Place the radiator body upside-down on a soft surface to avoid damage to the heater. Make sure it is in a stable position and will not fall.
- 2 You will need the front castors (H) and rear castors and wheel-cover system (G) as shown in Fig. 1. the required screws can be found in the white sections on the base of the unit so they will need to be removed first (2 each end).
- 3 Place the front castors on the end closest to the control panel, aligning the screw holes (see Fig.2).
- 4 Secure the front castors in place with 2 of the screws (see Fig. 3).
- 5 Place the rear wheel cover on the end furthest from the control panel, aligning the screw holes (see Fig.4).
- 6 Place the rear wheels on the end furthest from the control panel, aligning the screw holes (see Fig.5).
- 7 Secure rear castors and wheel cover in place with the remaining 2 screws (see Fig. 6).
- 8 Return the unit to an upright position. It is now ready for use.

    IMPORTANT: Do not operate without castors attached. The heater must only be operated in an upright position. Any other position could create a hazardous situation. Ensure that the castors are fitted to the base of the heater so that, when in use, the controls are at the top and the cable storage is at the bottom of the control panel.

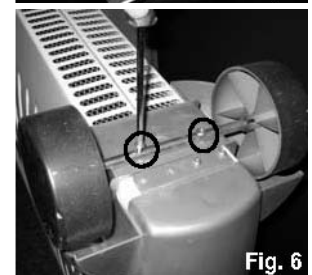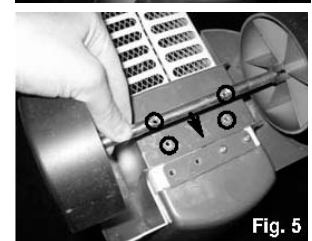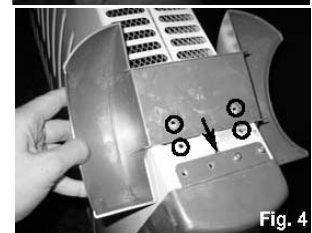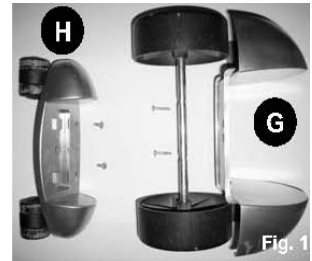

Operating Instructions

 Control Panel:

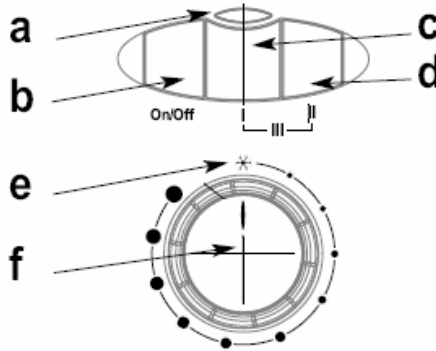

Your heater is equipped with 3 heat control settings and a thermostat:

- a) Power indicator light (shows if the unit is switched on)
- b) ON/OFF
- c) "I" turns the unit on to 800W
- d) "II" turns the unit on to 1400W
- c & d) "III" turns the unit on to 2200W
- e) Frost protection setting
- f) Thermostat

Heating

- Set the power and setting control switch to the maximum setting (thermostat on high and both c & d button selected on the control panel) for fast warm-up of a room.
- For greater economy, use the high heat setting initially and then switch to a lower heat setting.

Thermostat Control Switch Operation

The thermostat is used to control the room temperature. To set the thermostat:

 
- Turn the thermostat knob clockwise until the maximum temperature setting is reached.
- Once the desired room temperature is reached, slowly turn the thermostat knob anti-clockwise until you hear a click.
- The heater will turn on and off automatically maintaining the room temperature that you have set.

Frost protection setting *

- This setting enables you to automatically maintain the temperature above 0° in a normally insulated room.
- To make use of this setting, plug in your appliance, turn the knob so that the marker is opposite the “ * ” symbol and select a heat control setting.

Humidification System

- To maintain a comfortable level of moisture in your room during winter, this unit is equipped with an in-built humidifier cup. However, the use of the Humidifier System is optional.
- The Humidifier System is located in the rear panel (opposite end to the control panel)
- To use the system, open the cover (marked h on the image to the right).
- Fill the humidifier cup with up to 700ml of water. Do not fill past the “MAX” water line as marked with (i).
- The humidifier cup is also equipped with a fine felt on the inside. Do not remove this felt as it helps to maintain the moisture for longer.
-

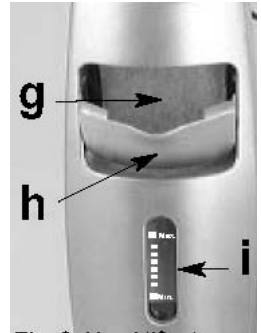

IMPORTANT: This in-built humidifier cup should only contain water. It is prohibited to add perfume, petrol, oil or other flammable liquids.

CAUTION: During use and for a period of time after the unit is switched off, the water in the in-built humidifier cup will be very hot.

Safety Features

Thermal Cut off Protection:

If the unit reaches extremely high temperatures, the unit will temporarily switch off. If this occurs, turn the heater off, unplug it, Wait five to ten minutes for the unit to cool down then inspect the unit and remove any objects on or adjacent to the heater that may cause high temperatures, for example a build up of dust on the rear inlet panel. After it has cooled down and you have removed any objects you may plug the unit back in and resume normal operation.

Care and Maintenance

1. Always disconnect the cord from the electrical outlet when cleaning your heater.
2. Light accumulated dust may be removed from the heater with a soft cloth or vacuum cleaner using the dusting brush attachment.
3. Wipe the exterior surfaces of the heater occasionally with a cloth moistened (not dripping wet) with a mild soap solution. Dry the case thoroughly with a soft dry cloth before operating the heater.
4. Avoid the use of gasoline, benzine, thinner etc as they may result in damage to the heater.
5. Store the heater in a clean dry place when not in use.



CAUTION! Do not immerse the heater in water or allow water to drip into the interior of the heater housing as this could create a fire or electric shock hazard.



WARNING! Do not attempt to open or repair the heater yourself. Doing so could void the warranty and cause damage or personal injury.