

omega
altise

OCT18M
1800W Ceramic
Fan Heater



Instruction
Manual

Important Safety Instructions

1. Disconnect the power plug before dismantling, assembling or before cleaning.
2. Make sure the heater is on a dry and even surface.
3. Always use the heater in an upright position.
4. Do not insert or allow foreign objects to enter any ventilation or exhaust opening, as this may cause an electric shock, fire or damage to the appliance.
5. This appliance is not intended for use by persons (including children) with reduced physical, sensory or mental capabilities, or lack of experience and knowledge, unless they have been given supervision or instruction concerning use of the appliance by a person responsible for their safety.
6. Children should be supervised to ensure that they do not play with the appliance.
7. The heater must not be located immediately below a socket-outlet;
8. Do not use this heater in the immediate surroundings of a bath, a shower, or a swimming pool;
9. If the supply cord is damaged, it must be replaced by the manufacturer, its service agent, or similarly qualified persons in order to avoid a hazard;
10. Do not use your appliance with an extension cord unless it has been checked and tested by a qualified electrician or electrical supplier.
11. Do not use the appliance for any other purpose than its intended use.
12. Do not position the appliances in close proximity to curtains or other combustible materials. Keep combustible material such as furniture, cushions, bedding, paper, clothes, curtains etc. at least 1.0m away from the heater.
13. Do not operate in areas where gasoline, paint or other flammable liquids are used or stored.

CAUTION: In order to avoid a hazard due to inadvertent resetting of the thermal cutout, this appliance must not be supplied through an external switching device such as a timer, or connected to a circuit that is regularly switched on and off by the utility.

WARNING: IN ORDER TO AVOID OVERHEATING, DO NOT COVER THIS HEATER

Read all instructions before using this unit. Keep them for future reference.

Specifications

Model	OCT18M
Rated Voltage	220-240V / 50Hz
Watts	1800W
Dimensions (h x w x d) mm	250 x 150 x 180
Weight (Nett)	1.4kg

Controls	Manual
Settings	Cool fan / Low heat / High heat
Oscillation	N/A
Safety Features	Tilt switch; Thermal cut-off protection
Warranty	2 year replacement

Operating Instructions



Your heater is equipped with 4 control settings on the power switch:

- | Symbol | Function |
|---------------|---------------------|
| 0: | Power Off |
| + : | Cooling fan setting |
| I: | Low heat setting |
| II: | High heat setting |

Fan

- Turn fan on by turning the selection knob to “+” and rotating the thermostat to maximum position.
- You can use the fan at any time during the year to circulate the air within the room.

Heating

- Turn the selection knob to “ I ” for low heat setting and “ II ” for high heat setting.
- For greater economy, use the high heat setting initially and then switch to the Low heat setting.
- For the Low and High heat settings the fan remains at the same speed, only the element changes to create the greater/lesser heat flow.

Oscillation

- Turn the oscillating switch to “ —”, the heater will oscillate right and left. To stop the oscillating, turn the switch to “ O ”.

Thermostat Control Switch Operation

The thermostat is used to control the room temperature. To set the thermostat:

- Turn the thermostat knob clockwise until the maximum temperature setting is reached.
- Once the desired room temperature is reached, slowly turn the thermostat knob anti-clockwise until you hear a click.
- The heater will turn on and off automatically maintaining the room temperature that you have set.

Safety Features

Safety Tilt Switch:

As a safety measure, the unit will shut off if in the event of it being knocked over. Should this occur, turn the heater off and place it back in the upright position, then switch it back on.

Thermal Cut off Protection:

If the unit reaches extremely high temperatures, the unit will temporarily switch off. If this occurs, turn the heater off, unplug it, Wait five to ten minutes for the unit to cool down then inspect the unit and remove any objects on or adjacent to the heater that may cause high temperatures, for example a build up of dust on the rear inlet panel. After it has cooled down and you have removed any objects you may plug the unit back in and resume normal operation.

Care and Maintenance

1. Always disconnect the cord from the electrical outlet when cleaning your heater.
2. Light accumulated dust may be removed from the heater with a soft cloth or vacuum cleaner using the dusting brush attachment.
3. Wipe the exterior surfaces of the heater occasionally with a cloth moistened (not dripping wet) with a mild soap solution. Dry the case thoroughly with a soft dry cloth before operating the heater.
4. Avoid the use of gasoline, benzine, thinner etc as they may result in damage to the heater.
5. Store the heater in a clean dry place when not in use.



CAUTION! Do not immerse the heater in water or allow water to drip into the interior of the heater housing as this could create a fire or electric shock hazard.



WARNING! Do not attempt to open or repair the heater yourself. Doing so could void the warranty and cause damage or personal injury.