

OPERATION, MAINTENANCE AND SAFETY INSTRUCTIONS

FOR OMEGA ALTISE PEDESTAL FAN




MODELS INCLUDE:
OHVP46C

omega
altise


IMPORTANT SAFETY INSTRUCTIONS

IMPORTANT: Read the safety precautions of this booklet carefully before attempting to assemble, install, operate or maintain the product described. Protect yourself and others by observing all safety information. Failure to comply with instructions could result in personal injury and/or property damage. If you are unsure about anything regarding your fan or these instructions, please contact Omega Altise on 1300 795 572 in Australia or (09) 415 6000 in New Zealand before operating your appliance.

1. Read all instructions carefully before using the pedestal fan.
2. Use this fan only as described in this manual. Any other use not recommended by the manufacturer may cause fire, electrical shock, or injury to persons. Do not modify this appliance. Do not try to repair this appliance – there are no user serviceable parts within.
3. Remove the packaging and ensure that the appliance is undamaged (keep packing box for later storage). In case of doubt do not use the appliance and contact Omega Altise Service. Do not let children play with any parts of the packaging.
4. This appliance is not intended for use by persons (including children) with reduced physical, sensory or mental capabilities, or lack of experience or knowledge, unless they have been given supervision or instruction concerning the use of the appliance by a person responsible for their safety. Children should be supervised to ensure that they do not play with the appliance. Extreme caution is necessary when the fan is used by or near children or individuals with decreased mental and physical capacity and whenever the fan is left operating unattended.
5. Before you use the appliance, check if the voltage marked on the rating label corresponds to the mains in your home. The appliance must be connected to a grounded power supply.
6. Do not use this appliance with a programmer, timer or any other device that switches the appliance on automatically, since a fire risk exists if the appliance is covered or positioned incorrectly.
7. Do not pull the power cord to disconnect with the power source. Always grasp the plug to pull it out.
8. Do not run power cords under rugs, curtains or other combustible materials. Do not place power cords in areas where they can be a tripping hazard. Do not operate directly below a power outlet.
9. Do not insert any objects into the appliance as it may cause an electric shock or fire or damage to the appliance. Do not block or tamper with the appliance in any manner while it is in operation. To prevent a possible fire, do not cover the appliance in any manner. Do not place on soft surfaces, like a bed, where openings may become blocked.
10. Do not leave the appliance unattended. Always unplug the appliance when not in use. Take care that it is not obstructed when rotating.

WARNING:  The Function Switch should not be used as the sole means of disconnecting power. Always unplug the power cord before servicing or moving the appliance.

11. Keep materials such as hair, net curtains, tablecloths & clothes away from the openings of the fan, as material may be sucked into the appliance causing injury, damage to property or the appliance.
12. The appliance has hot and arcing or sparking parts inside. It must NOT be used in potentially dangerous locations such as flammable, explosive, chemical-laden, corrosive, salty or wet atmospheres. This appliance is intended for general indoor domestic use ONLY.
13. This appliance is not intended for use in wet or damp locations. Never locate it where it may fall into a bathtub or other water container.
14. Do not use the fan outdoors. Do not use close to windows or in direct sunlight.
15. NOTE that over time, the grills at the front and rear will build up dust & dirt. This should be cleaned regularly to maintain optimum efficiency. Follow the cleaning procedure within this instruction.
16. Always place the appliance on flat, stable surfaces before use. Always place the appliance vertically on its base.

WARNING:  To avoid danger of electric shock, unplug from outlet when not in use and before cleaning. If the supply cord is damaged, it must be replaced by the manufacturer, its Service Agent or similarly qualified persons in order to avoid a hazard. In order to avoid overheating, do not cover the appliance. Do not use the appliance in the immediate surrounding of a bath, shower or swimming pool.

TECHNICAL DETAILS

Model: OHVP46C pedestal fan.


Power: 220-240V~ 50Hz, 120W.

Weight: 9kg.

Dimensions (HxWxD): 119-160x56x40cm.

PARTS

PART	DESCRIPTION
01	L-Screw
02	Washer
03	Base Weight Insert
04	Decorative Base
05	Screws (4)
06	Base Tube
07	Decorative Cap
08	Tube Locking Nut
09	Extension Tube
10	Fan Head

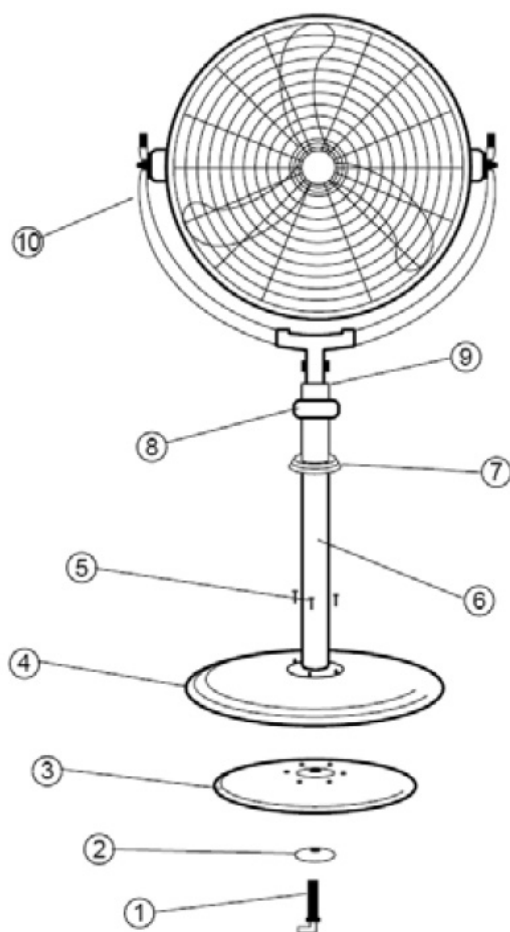

GETTING STARTED – ASSEMBLY

1. Carefully remove the appliance parts from the plastic bag and the carton, and unwind the cord to its full length.
2. Place the Base tube on top of the Decorative Base. Lift the Decorative Cap and screw in place with the four screws.
3. Place the Base Weight Insert inside the Decorative Base and fix in place using the Washer and L-Screw.
4. Place the Fan Head onto the Extension Tube and lock in place by hand tightening the screw at the back (do not over-tighten).
5. Adjust the height of the pedestal fan by loosening off the Tube Locking Nut, adjusting the extension tubes and then re-tightening.
6. Adjust the speed control at the rear of the Fan Head to 0 (off). Plug the cord set into a 230-240V~A.C. 50Hz earthed electrical outlet. Place on a level, smooth, stable surface. Turn the power on at the electrical outlet.

CONTROLS & OPERATION

CONTROL KNOB:

The control knob is at the top rear of the motor. It has four settings: 0 (Off), 1 (Low), 2 (medium) and 3 (High). Turn the knob to the appropriate setting to adjust speed or turn off.

OSCILLATION:

This Pedestal fan does not have an oscillation function, but the angle of the fan head can be adjusted by loosening the bolts at the sides of the Fan Head, adjusting the angle of the Fan head, and then re-tightening.

HEIGHT:

The height of the fan can be adjusted by loosening the Tube Locking Nut, adjusting the position of the extension tube and retightening the Tube Locking Nut.

CLEANING & MAINTENANCE

WARNING:



ALWAYS UNPLUG THE CORD BEFORE MOVING OR SERVICING, DO NOT IMMERSE APPLIANCE IN WATER!

The fan should be cleaned periodically (at least once a month depending on the build-up of dust).

Always make sure that the appliance is completely dry before connecting back to the mains supply.

If needed, the front grill can be removed. Remove the front grill by pulling the small, black cover from the bottom of the grill to expose the small Philips screw which can be undone, allowing the two halves of the metal grill to be separated. Clean the fan blades and grill with a soft damp cloth and replace the front grill.

CAUTION: Do not use gasoline, benzene, thinner, harsh cleaners, etc. as they will damage the fan. NEVER use ALCOHOL OR SOLVENTS.

Do not disassemble the fan in any manner.

STORAGE: Store the fan with these instructions in the original packaging, in a cool, dry place.

It is important that you retain these instructions, proof of purchase as well as other important documents about this product for future reference. Due to continual product development, Omega Altise reserves the right to alter specifications or appearances without notice.

Dispose of packaging responsibly – recycle where facilities are available.