

OPERATION, MAINTENANCE AND SAFETY INSTRUCTIONS

FOR OMEGA ALTISE TOWER FAN




MODELS INCLUDE:
OT1123B

omega
altise


IMPORTANT SAFETY INSTRUCTIONS

IMPORTANT: Read the safety precautions of this booklet carefully before attempting to assemble, install, operate or maintain the product described. Protect yourself and others by observing all safety information. Failure to comply with instructions could result in personal injury and/or property damage. If you are unsure about anything regarding your fan or these instructions, please contact Omega Altise on 1300 795 572 in Australia or (09) 415 6000 in New Zealand before operating your appliance.

1. Read all instructions carefully before using the tower fan.
2. Use this tower fan only as described in this manual. Any other use not recommended by the manufacturer may cause fire, electrical shock, or injury to persons. Do not modify this appliance. Do not try to repair this appliance – there are no user serviceable parts within.
3. Remove the packaging and ensure that the appliance is undamaged (keep packing box for later storage). In case of doubt do not use the appliance and contact Omega Altise Service. Do not let children play with any parts of the packaging.
4. This appliance is not intended for use by persons (including children) with reduced physical, sensory or mental capabilities, or lack of experience or knowledge, unless they have been given supervision or instruction concerning the use of the appliance by a person responsible for their safety. Children should be supervised to ensure that they do not play with the appliance. Extreme caution is necessary when the tower fan is used by or near children or individuals with decreased mental and physical capacity and whenever the tower fan is left operating unattended.
5. Before you use the appliance, check if the voltage marked on the rating label corresponds to the mains in your home. The appliance must be connected to a grounded power supply.
6. Do not use this appliance with a programmer, timer or any other device that switches the appliance on automatically, since a fire risk exists if the appliance is covered or positioned incorrectly.
7. Do not pull the power cord to disconnect with the power source. Always grasp the plug to pull it out.
8. Do not run power cords under rugs, curtains or other combustible materials. Do not place power cords in areas where they can be a tripping hazard. Do not operate directly below a power outlet.
9. Do not insert any objects into the appliance as it may cause an electric shock or fire or damage to the appliance. Do not block or tamper with the appliance in any manner while it is in operation. To prevent a possible fire, do not cover the appliance in any manner. Do not place on soft surfaces, like a bed, where openings may become blocked.
10. Do not leave the appliance unattended. Always unplug the appliance when not in use. Take care that it is not obstructed when oscillating.

WARNING:  The Function Switch should not be used as the sole means of disconnecting power. Always unplug the power cord before servicing or moving the appliance.

11. Keep materials such as hair, net curtains, tablecloths & clothes away from the openings of the tower fan, as material may be sucked into the appliance causing injury, damage to property or the appliance.
12. The appliance has hot and arcing or sparking parts inside. It must NOT be used in potentially dangerous locations such as flammable, explosive, chemical-laden, corrosive, salty or wet atmospheres. This appliance is intended for general indoor domestic use ONLY.
13. This appliance is not intended for use in wet or damp locations. Never locate it where it may fall into a bathtub or other water container.
14. Do not use the tower fan outdoors. Do not use close to windows or in direct sunlight.
15. Always place the appliance on flat, stable surfaces before use. Always place the appliance vertically on its base.
16. NOTE that over time, the grills at the front and rear of the appliance will build up dust & dirt. This should be cleaned regularly to maintain optimum efficiency. Follow the cleaning procedure within this instruction.
17. **WARNING:** The remote control contains a button battery inside. Keep batteries out of reach of children. When not in use, store the remote control in the bracket at the rear top of the appliance.

WARNING:  To avoid danger of electric shock, unplug from outlet when not in use and before cleaning. If the supply cord is damaged, it must be replaced by the manufacturer, its Service Agent or similarly qualified persons in order to avoid a hazard. In order to avoid overheating, do not cover the appliance. Do not use the appliance in the immediate surrounding of a bath, shower or swimming pool.

TECHNICAL DETAILS


Model: OT1123B –Black Tower fan with remote control.

Power: 220-240V ~ 50Hz, 90W.


Product weight: 5.8kg.

Product dimensions (WxDxH): 300x300x1124mm.

GENERAL TOWER FAN PARTS

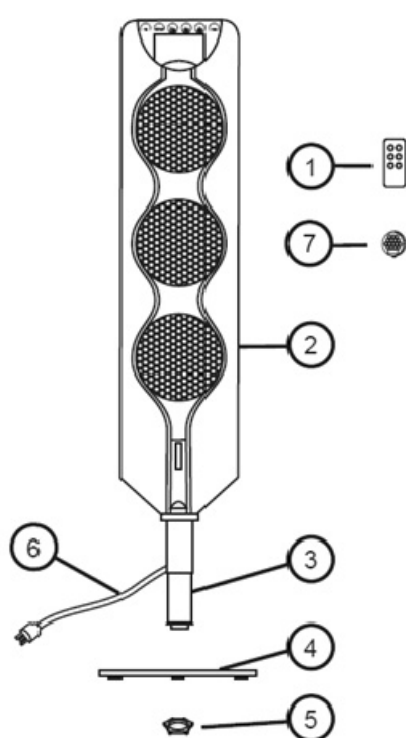


- 1) Remote control.
- 2) Main body.
- 3) Stand.
- 4) Glass base.
- 5) Locking nut.
- 6) Power cord & plug.
- 7) Aroma disk.

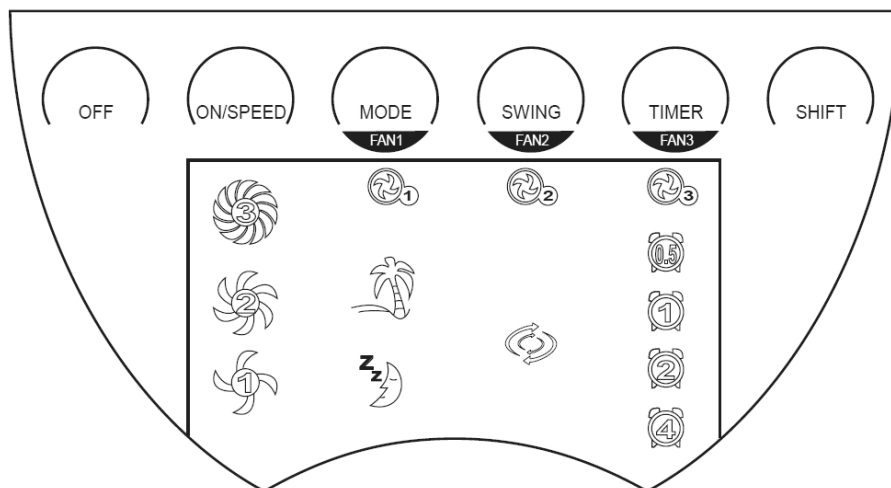

The display is set up so that the icons are derived from the buttons above them. For example, the 3 modes are Normal (no icon lit), Natural (palm tree icon lit) and Sleep (Moon icon lit).

 This appliance is supplied with one Aroma disk with two replacement fibre pads. To use, place a fibre pad inside the Aroma disk, and add a little essential oil. Hang the Aroma disk from the front of any of the three fans. The fan action will help distribute the aroma around the room.

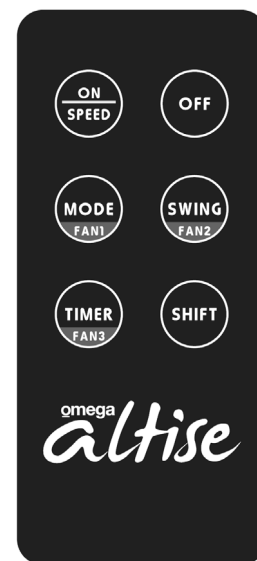

GETTING STARTED

1. Carefully remove the appliance from the plastic bag and the carton, and unwind the cord to its full length.
2. Assemble the base of the fan onto the bottom of the body by placing the stand through the hole in the base (feet down) and locking in place with the locking nut.
3. The remote control already contains a CR2032 3V battery. To replace, push clip at bottom of remote inwards & pull out battery holder, replace battery and push holder back in. The range of the remote control is approximately 6m.

WARNING: This product contains a button battery inside. Keep batteries out of reach of children. Swallowing can lead to serious injury in as little as 2 hours, or death due to chemical burns and potential perforation of the oesophagus. Take care battery holder is secure and dispose of used batteries immediately and safely.

CONTROLS

CONTROLS:

There are 6 control buttons on the control panel (top front of tower fan body) and the remote control.

- A) Off button: Press once to turn the fan off.
- B) On/Speed button: Press once to turn the tower fan on (the mode/speed/mode settings will be as they were the last time it was operating, or low speed, normal mode, swing & timer off, all 3 fans working). Press to cycle through the speeds (Low, Mid, High, Low...). While the tower fan is on, the blue LED will be lit.
- C) Mode button: Once the tower fan is running, pressing the mode button will cycle the fan mode through Normal, Natural and Sleep modes. The Normal mode runs the fans at the speed set. The Natural mode varies the speed of the fan (high, mid, low) and repeat. The Sleep mode slows the speed of the fan down (30 minutes per speed), but does not repeat.
- D) Swing button: Press the button once to start the swing function and again to stop the swing function.
- E) Timer button: Press the button to cycle through the timer from 0-7.5 hours in 0.5 hour increments. As time progresses the display (below the button) will adjust (the time left is calculated by adding the numbers up).
- F) Shift button: This button is used to adjust which of the 3 fans are on. Press the Shift button once. The small fan indicators under the mode, swing & timer buttons will flash for 5 seconds. Within this time, press the button above the fan indicator you want to adjust (for example, it is off and it needs to be turned on). If no button is pressed, no adjustment will take place. After the 5 seconds, the indicators will stop flashing and the adjustment will be set.

OPERATING THE TOWER FAN:

With the power cord plugged in, Press the On/Speed fan once.

- a) Choose a fan speed by pressing the speed button.
- b) If required, turn on the Swing function with the Swing button.
- c) If required, set up the timer by pressing the Timer button (a sequence of 0-7.5 hours).
- d) If required, adjust the fan mode by pressing the Mode button to cycle through normal, natural and sleep modes.
- e) To turn off & on individual fans, press the Shift button, and use the Off & On/Speed buttons to adjust the individual fans.

Turn the tower fan off by pressing the Off button.

CLEANING & MAINTENANCE

WARNING:



ALWAYS UNPLUG THE CORD BEFORE MOVING OR SERVICING, DO NOT IMMERSE APPLIANCE IN WATER!

Cleaning and maintenance shall not be made by children without supervision. The fan should be cleaned periodically (at least once a month depending on the build-up of dust). Clean the body of the tower fan with a soft damp cloth. Always make sure that the appliance is completely dry before connecting back to the mains supply.

CAUTION: Do not use gasoline, benzene, thinner, harsh cleaners, etc. as they will damage the tower fan. NEVER use ALCOHOL OR SOLVENTS.

Vacuum the grills at the front and rear of the appliance. Do not disassemble the fan in any manner.

STORAGE: Store the tower fan with these instructions in the original packaging, in a cool, dry place.

It is important that you retain these instructions, proof of purchase as well as other important documents about this product for future reference. Due to continual product development, Omega Altise reserves the right to alter specifications or appearances without notice. Dispose of packaging responsibly – recycle where facilities are available.